

# User Manual

Please read this user manual throughout before using

Ver:A

## Declaration

Any internal technology (including hardware equipment, software design and product trademark) of the product shall be protected by law, and any infringement of intellectual property rights of the product shall be investigated for legal liability.

All the brand and trademark in this product are protected by law, all other company's brand and trademark in this product are protected by their owner's law.

In order to better service majority users, SWIT products will keep improving and developing, SWIT keep the right to revise and improve this user manual without previous notice.

The warranty period of this product are two years, the following condition are not covered by the warranty:

- (1) The appearance and the LCD panel are damaged by man-made out force;
- (2) The amount of defective pixels are under three;
- (3) Damage the product by using incompatible power adaptor;
- (4) Damage the product due to violation operation;
- (5) Disassemble the product when using;
- (6) Other faults or damages not caused by design, technology, manufacture and quality.

\*Any sales person have no right to provide extra warranty beyond these terms.

If you have any advises or requirements about our products during using, please feel free to contact with us via phone or E-mail.

This manual is applicable to all models of BM-H monitors. The schematic diagram of BM-H21 is taken as an example. Any specification, appearance of the different, this manual will be attached with text.

---

### SWIT Electronics Co., Ltd.

Address: 10 Hengtong Road, Nanjing Economic and Technological Development Zone,  
Nanjing 210038, P.R.China

Phone: +86-25-85805753

Fax: +86-25-85805296

Email: [contact@swit.cc](mailto:contact@swit.cc)

<http://www.swit.cc>

### Warning

1. To reduce the dangerous of fire or electric shock,do not expose the monitor in raining or wet place.
2. The monitor will create noise when using near high-intensity magnetic field.

### Precautions for power supply

1. Please use the special power adapter specified by the original factory to avoid damage to the product.
2. If other DC power supply is used, ensure that the voltage range, power supply and polarity of the power supply meet the requirements.
3. In the following cases, please unplug the power cord and external battery of the product:
  - (A) If you have not used the product for A long period of time.
  - (B) If the power cord or power plug/socket is damaged.
  - (C) If the product is hit or dropped so that the shell is damaged.

### Precautions for product use

1. please do not touch the screen surface directly with your fingers to avoid damage to the screen, and the oil on the skin will be difficult to remove if left on the screen.
2. please do not put pressure on the LCD screen, LCD screen is very delicate and fragile.
3. Do not place the product in an unstable place, as the product may be seriously damaged due to falling.

### Precautions for product cleaning

1. clean LCD screen, please use dry soft fabric with fluff and special liquid crystal cleaning agent, to remove dust and stains on the screen.
2. do not pressure when wiping the LCD screen surface.
3. please do not use water and other chemical cleaners to wipe the LCD screen surface, chemical agents may damage the LCD screen surface.

## Contents

Declaration .....	2
Precaution .....	3
Content .....	4
Packing list .....	4
Introduction .....	4
Description .....	5
Front panel .....	5
Back panel .....	7
Display information .....	8
Setting .....	11
Dimension .....	23
Specification .....	24
Trouble shooting .....	27

## Packing list

No.	Standard accessories	Quantities
1	Monitor	x 1
2	User manual	x 1
3	Warranty card	x 1
4	Battery plate (V-mount & Gold-mount)	x 1
5	Monitor stand	x 2
6	Power cable	x 1


## Introduction

This series of monitors adopt LCD panel, the resolution is up to 1920×1080, H178° / V178° ultra-wide viewing angle, supports 1 channels of 12G/6G/3G/HD/ SD-SDI and has 3 channels of 3G/HD/ SD-SDI, and 1 channel of HDMI 2.0, and has 3 channels of 3G/HD/ SD-SDI ,1 channels of 12G/6G/3G/HD/ SD-SDI ring out, with earphone and speaker output.

### Features:



- 1920×1080 IPS LCD Panel
- 12GSDI, 4x3GSDI, HDMI2.0 4K input
- 16ch audio bar display, with any selected 2ch output
- Support waveform selection display Y/Cb/Cr/R/G/B /RGB and single line selection mode
- Vector scope, R/G/B/Y histogram, bi-color focus assist
- 3DLUT (17 x 17 x 17) accurate color correction
- Dynamic UMD and TALLY(TSL3.1, 4.0) display
- Composition ratio auxiliary line:4:3/13:9/14:9/15:9/16:9/1.85:1/2.35:1/2:1/2.39:1/Custom 1/Custom 2
- Support USB firmware upgrade and import Log file.(USB file system supports FAT 32 format only)
- Support ECO mode

### • Front panel

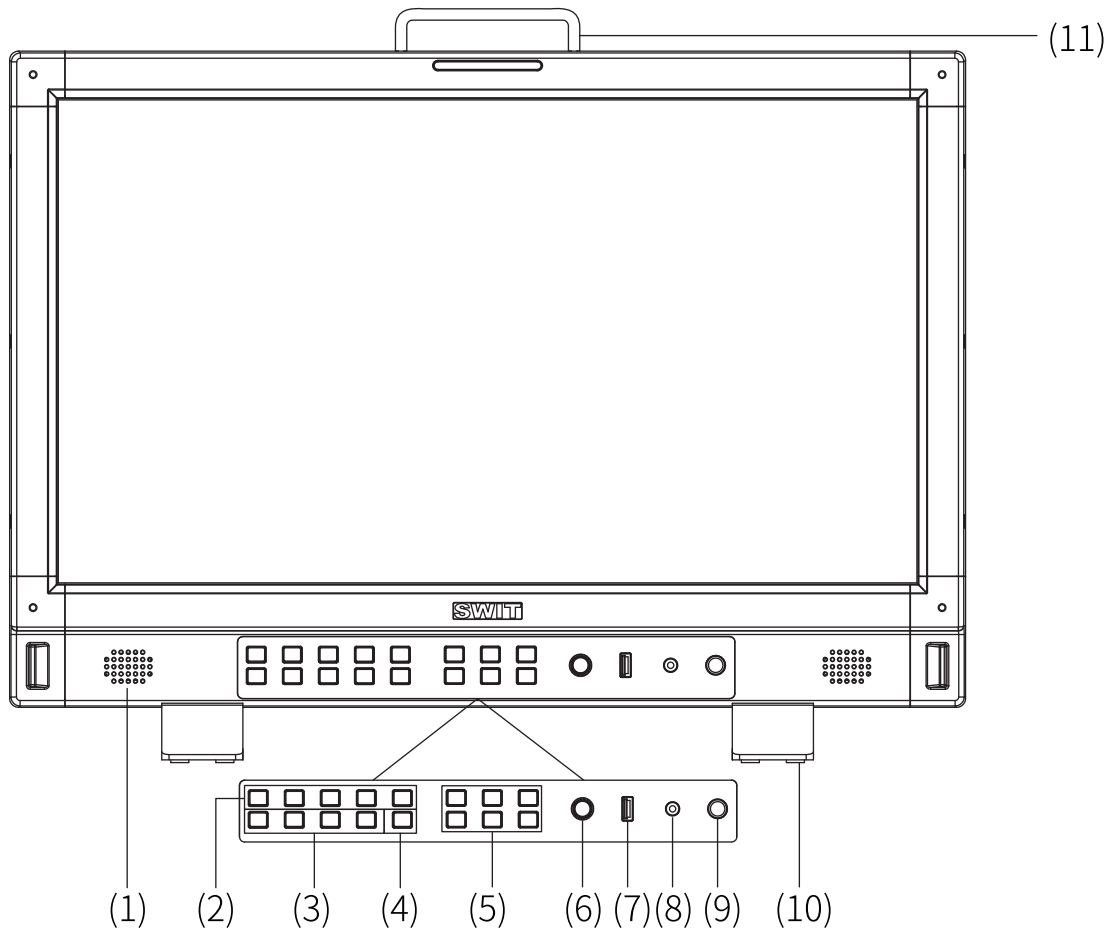


- (1) **Speaker:** For SDI/HDMI embedded audio. (Will not work if earphone is plugged in)
- (2) **F1~F5 function keys:** Customize shortcut function keys. Users can set the shortcut keys to different functions according to their own requirements.
- (3) **User1~User4:** U1~User shortcut key, which can be used to quickly enter the set user mode. Long press to save user settings. Please see details in “9. System”
- (4) **INFO:** Display setting item. Press "INFO" button to display or turn off relevant status information and audio and video analysis function graph. When opening the menu, press "INFO" to exit the menu with one click

(5)

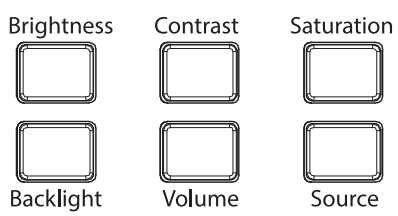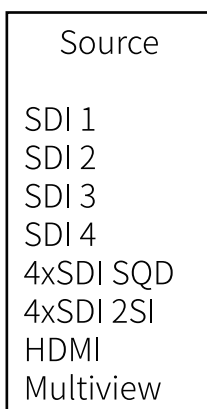	Brightness: Adjust the brightness. -100~100 adjustable, default value is 0.
	Contrast: Adjust contrast. -100~100 adjustable, default value is 0.
	Saturation: Adjust saturation. -100~100 adjustable, default value is 0.
	Backlight: Adjust the backlight. 0~100 adjustable, default value is 16.
	Volume: Adjust the volume. 0~100 adjustable, default value is 36.
<p>Press Brightness, Contrast, Saturation, Backlight, Volume five shortcut keys confirm to select this option, and rotate Menu to adjust the corresponding item value directly. Press the button and automatically cancel the selection without operation within five seconds, and the button light will be off, long press to restore default values; Long press the volume button to mute.</p>	
	Source: Select the input source signal format.

- (6) **Menu/Enter:** When no Menu is displayed, press the button directly to open the Main Menu; Rotate the knob to select different settings or adjust parameter values, press the knob to set;
- (7) **LUT/Firmware:** Update firmware or import LUT files;
- (8) **PHONE:** 3.5mm headphone jack is used to monitor the embedded audio signals of SDI and HDMI;
- (9) **Power:** Power switch;
- (10) **Tally lamp:** You can select the color of the tally lamp from “Green”, “Red”, or “Yellow”.

## • Rear panel

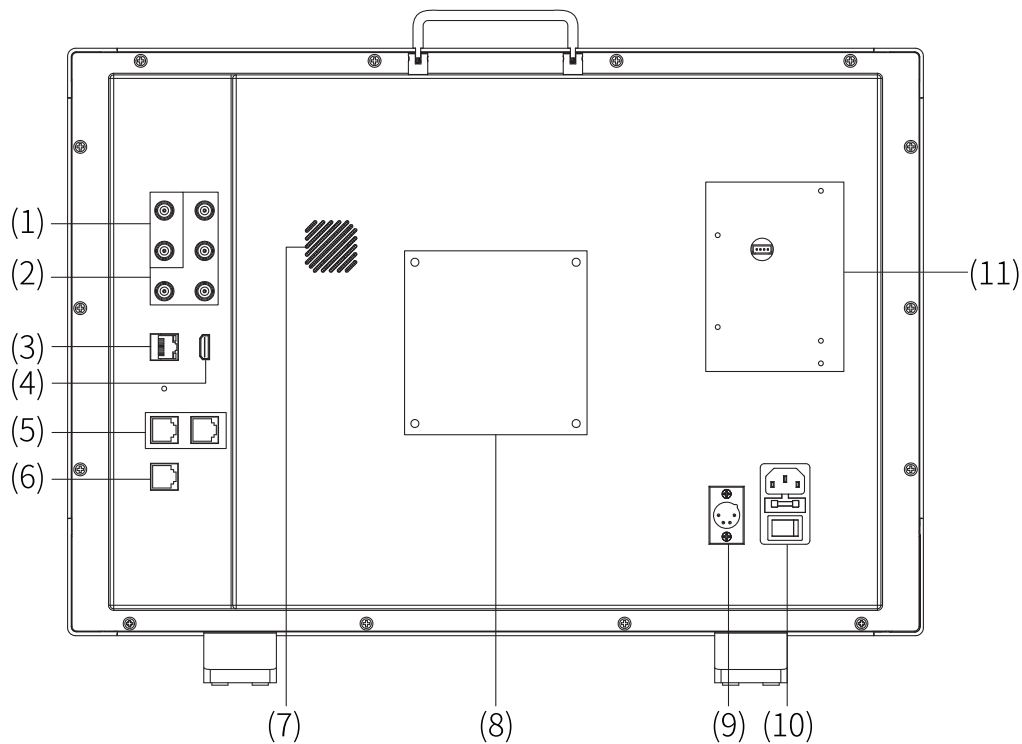

(1) **SDI1 IN&OUT**: 12G/6G/3G/HD/SD-SDI

(2) **SDI2 IN&OUT, SDI3 IN, SDI4 IN**: 3G/HD/SD-SDI

(3) **ETHERNET(Network interface)**: 1000M high-speed RJ45 Ethernet port, for web external control

(4) **HDMI 2.0 IN**: Will not display HDCP protected content

(5) **RS485**: TSL UMD control port

(6) **GPI**: GPI control port

(7) **Fan**


(8) **VESA bracket mounting area**

(9) **DC IN**: 12V~17V

(10) **AC IN**: 100V~240V

(11) **Battery plate**

## • OSD

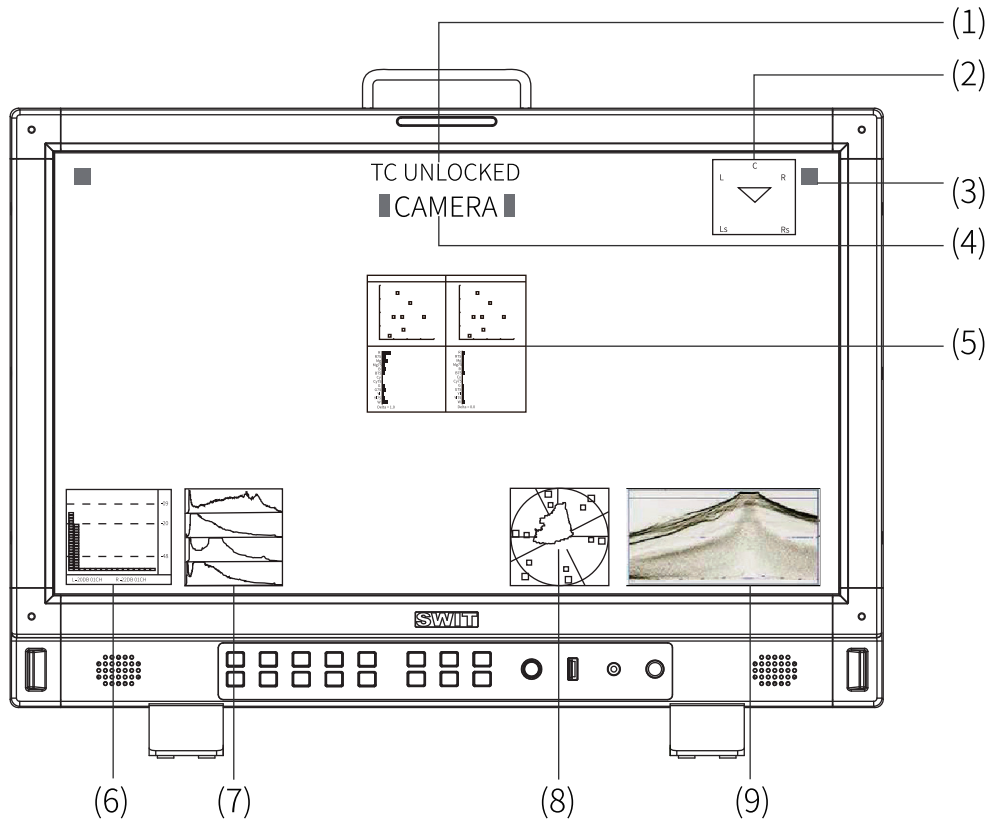

### (1) Time Code (SDI)

Under SDI input, the monitor can display Time code information (LTC, VITC1&2). If no Time code info is detected, it will display “TC UNLOCKED”. User can set function keys F1~F5 or GPI pins as “Time Code” to turn on or off this function.

### (2) Surround

The default channel of surround is 5.1 channel 7 & 8

### (3) On screen TALLY

Display TALLY signal from GPI control port.

### (4) Source ID/UMD

Display /UMD (TSL3.1/4.0) , user can set in the UMD menu

### (5) Auto Calibration

After auto calibration, the color gamut and chromatic aberration ( $\Delta E$ ) before and after the color correction pop up. "Auto Calibration" - "Measure" pops up the gamut value and color difference value ( $\Delta E$ ) of the previous calibration and this measurement.

### (6) Audio VU/PPM meters

Display meters of SDI/HDMI embedded audio or analog audio. The audio meter display channels, on screen positions and background blending are adjustable. can be set in the submenu of “Audio setting”. User can set function keys F1~F5 or GPI pins as “Audio Bar” to turn on or off this function.

### (7) Histogram

User can set function keys F1~F5 or GPI pins as “Histogram” to turn on or off this function.

### (8) Vector

User can set function keys F1~F5 or GPI pins as “vector”, The vector scope pattern display positions,



colors, background are adjustable. Turning on the gamut map in the case of turning on the vector map can display the gamut ratio of the signal image under DCI-P3/REC709/REC2020

#### (9) **Waveform**

User can set function keys F1~F5 or GPI pins as “Waveform” to turn on or off this function, the parameters of waveform, such as on screen positions,blending and color can be set in the submenu of “waveform setting” .

## Key configuration

### Steps

1. Press “Menu/ Enter” button, the main menu will pop up from the left top of the screen. The selected main menu highlights in yellow .
2. Revolve “Menu/ Enter” to select submenu, the selected submenu highlights in yellow, press “Menu/ Enter” to apply and enter into the selected submenu’ s items.
3. Revolve “Menu/ Enter” to select the item which needed to adjust, press “Menu/ Enter”, the selected item and its parameters will be highlighted in yellow
4. Revolve “Menu/ Enter” to change the selected item’ s parameter, press “Menu/ Enter” to apply and save the settings.
5. Revolve “Menu/ Enter” to select “Exit”, press “Menu/ Enter” to quit submenu. Select “Exit & Status” under the Main Menu and press to quit Main Menu

#### ※ **Notice**

- \* The items in gray cannot be set up
- \* If there is no operation under the set time, the menu will automatically save settings and quit.
- \* If the key inhabit function is turned on, except System menu, all other items are in gray. Please turn off the key inhibit function to adjust the items.

## Menu Configuration

Menu configuration introduces the main menu and each sub-menu. Menu items marked \* will give more detailed menu description or operation explanation after the list

### 1.Exit&Status—Exit menu,show current status of monitor

Menu Item	Menu item description
Format	Show current format of input signal; Show “No signal” when there are no recognized input signal; When input source choose multi view,will show the format of picture 1/2/3/4
Source	Show current input source
Color temp	Show current color temperature
Scanning	Show current value of scanning mode
F1	Displays function items set by each function key (F1 to F5)
F2	
F3	
F4	
F5	
Version	Show current version

### 2.Input—Set the color of input audio

Menu Item	Menu description	Value
Input Range*1	Set the input range of input audio	Full 0-1023、 SDI Full 4-1019、 Limited 64-940
Red Gain	Adjust Red Gain	-100 ~ +100
Green Gain	Adjust Green Gain	-100 ~ +100
Blue Gain	Adjust Blue Gain	-100 ~ +100
Red Bias	Adjust Red Bias	-100 ~ +100
Green Bias	Adjust Green Bias	-100 ~ +100
Blue Bias	Adjust Blue Bias	-100 ~ +100
Reset	Reset the gain and bias values of the settings	/

\*1 Input Range: Sets the Input Range of the video to suit the input video signal.  
The default video Input Range is Limited 64-940 for the broadcast application.

### 3.Picture—Setting for the picture preference

Menu item	Menu description	Value
Contrast	Adjust contrast	-100 ~ +100
Brightness	Adjust brightness	-100 ~ +100
Saturation	Adjust saturation	-100 ~ +100
Sharpness	Adjust sharpness	0 ~ +100
Backlight	Adjust backlight	0 ~ +100

## 4.Color Management—Setting about video colors

Menu item	Menu Description	Value	
Color Gamut *1	Set gamut values	LCD Native,DCI-P3,Rec.709,Rec.2020	
Gamma	Set gamma values	1.0,1.8,2.2,2.4,2.6,PQ1000,HLG1000,S-Log3	
Gamut and gamma values are set to menu items with specific values	HLG System Gamma *2	Set HLG System Gamma	1.0,1.1,1.2 (default) ,1.3,1.4,1.5
	D-Log to 709	Set gamut to Rec.709 camera table	OFF,J-Log1,Log-C,S-Log2,C-Log,V-Log,RedLogFilm,S-Log3,User-Log
	D-Log to PQ	Camera table when gamut is set to Rec.2020 and gamma value is PQ1000	OFF,ARRI_LogC_PQ,Canon_CLog2Cin_PQ,Canon_CLog3Cin_PQ,Panasonic_VLog_PQ,RED_L3G10_PQ,Sony_SLog3_Cin_PQ,Sony_SLog3_SG3_PQ
	D-Log to HLG	Camera table when gamut is set to Rec.2020 and gamma value is HLG1000	OFF,ARRI_LogC_HLG,Canon_CLog2Cin_HLG,Canon_CLog3Cin_HLG,Panasonic_VLog_HLG,RED_L3G10_HLG,Sony_SLog3_Cin_HLG,Sony_SLog3_SG3_HLG
Partition HDR/SDR	Display the current signal HLG/SDR/PQ/S-Log3 color gamut, respectively.	OFF,ON	
Color Temp	Set the color temperature value displayed on the screen	2000K~10000K,D55,D65,D75,D93,USER1,USER2	
User Temp	Set the user color temperature value when the color temperature mode is selected as “USER 1/USER2”	2000K~10000K,D55,D65,D75,D93	
Red Gain	Adjust user color temperature red gain	-100 ~ +100	
Green Gain	Adjust user color temperature green gain	-100 ~ +100	
Blue Gain	Adjust user color temperature blue gain	-100 ~ +100	
Red Bias	Adjust user color temperature red bias	-100 ~ +100	
Green Bias	Adjust user color temperature green bias	-100 ~ +100	
Blue Bias	Adjust user color temperature blue bias	-100 ~ +100	
Reset	Reset user color temp gain and bias	/	
LUT Upload*3	Select the cube file you want to import	None,3DLut.cube,User-Log.cube	
Calibration LUT Reset	Select the appropriate cube file to restore to factory settings	NO,3DLut.cube	

### \*1.Color Gamut

Set the gamut to match the input video.

### \*2.HLG System Gamma

When color gamut set to REC2020,display tunable only when Gamma is set to HLG1000

### \*3 LUT import

Place the cube file that needs to import the monitor in the root directory of the u-disk, insert the u-disk into the USB interface on the front shell of the monitor, and choose to import the corresponding file


## 5. Scanning—Setting for picture scan, zoom, etc.

Menu Item	Menu Description	Value
Scanning Mode	Set up a scanning mode that matches the audio to the screen	Pixel To Pixel, Panel Fit, Native
Zoom - in	Set a zoom mode	Off, Top Left, Top, Top Right, Left, Center, Right, Bottom Left, Bottom ,Bottom Right
Freeze Frame	Select an image still mode	OFF, ON
Odd/Even Frame*3	Set to open odd field or even field	OFF, Odd Frame, Even Frame

### \*1.Scanning Mode

Turn on this feature to adapt the video to the entire screen.  
Native only displays the original mode in the specified mode.

\*2.Zoom mode: Shown below, the image is divided into 9 regions and adjusted to display in sequence.

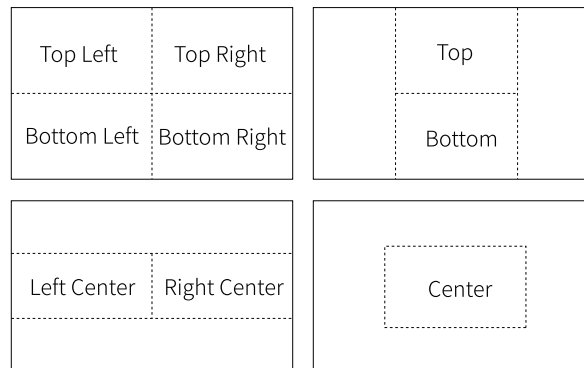

When the zoom mode is turned on, a rectangle box pops up at the bottom left of the screen, showing the currently selected zoom image area.

### \*3.Odd/Even Frame


Odd/Even Frame is only displayed in I mode. Open Low Latency Mode and Odd/Even Frame function is turned off.

## 6.Control—Setting for TALLY, UMD, IP control to the monitor


Menu Item	Menu Description	Value
GPI Control *1	Open or close GPI Control	OFF,ON
GPI 1Pin	Set the function of each pin for GPI terminal	SDI1, SDI2, SDI3, SDI4, 4×SDI(2-SI)、4×SDI(SQ), HDMI, Red Tally, Green Tally, Yellow Tally ,Time Code, Freeze Frame, WFM Type, WFM Single Line, UMD, Marker , Waveform, Audio Bar, Zebra, Vector, Low Latency Mode, Histogram, Focus Assist , False Color
GPI 2Pin		
GPI 3Pin		
GPI 4Pin		
GPI 5Pin		
GPI 6Pin		
Tally Setting	Open or close Tally lamp	OFF, ON, Blinking
Tally Position	Set the display position of On Screen Tally Lamp	Top, Bottom
F1	Set the control function of the function key	Time Code, Color Temp, Freeze Frame , Waveform, Waveform Type , UMD, Marker, H/V Delay, Blue Only, Audio Bar, Zebra, Vector, Low Latency mode, Histogram, Odd/Even Frame , Focus Assist ,False Color
F2		
F3		
F4		
F5		
UMD *2	Open or close UMD display	OFF, ON
UMD Color	Set the color of UMD characters	White,Red,Green,Blue,Black,Gray
UMD Position	Set the position of UMD characters	Top,Bottom
UMD Size	Set the size of UMD characters	Large, Small
UMD Blending	Show the transparency of the UMD background	OFF, LOW, HIGH
Display Type	Set display UMD or source name characters	Source ID, UMD
RS485 Address	Set the location of RS485	1~126
Baud Rate	Fixed for 115200	115200,8,n,1
Source ID	Set the character that the source name displays	A-Z, a-z, 0-9, [ ] ^ _ ` { } ~ @ ? > = < , , / . - + * ( ) ' & % \$ # ' ' !

## \*1 GPI control

Connect the GPI remote control terminal through the GPI interface on the real panel of the monitor, turn on “GPI control” and set the function of GPI 1-6 buttons.

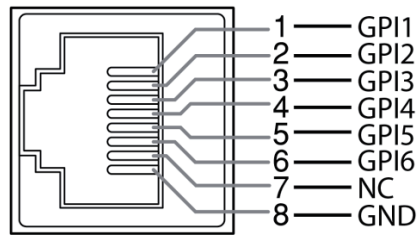


The GPI control allows you to control both the Tally light and the on screen TALLY light on at the same time:

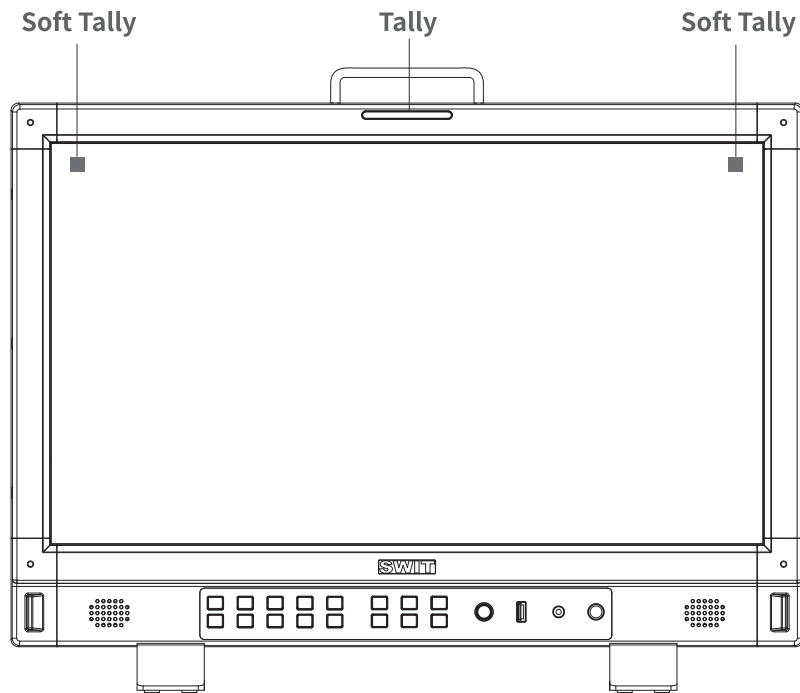


## \*2 UMD

Select the display type as “UMD”, which can be controlled with TSL UMD.

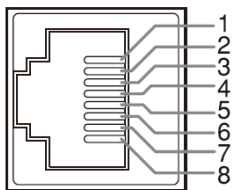


RS485 IN

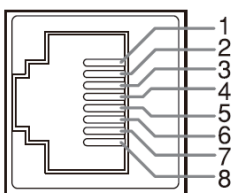

RS485 OUT

Pin No	RS 485 IN	RS 485 OUT
1	GND	GND
2	NC	NC
3	RXD-	RXD-
4	NC	NC
5	NC	NC
6	RXD+	RXD+
7	TXD-	TXD-
8	TXD+	TXD+

## Cascade:

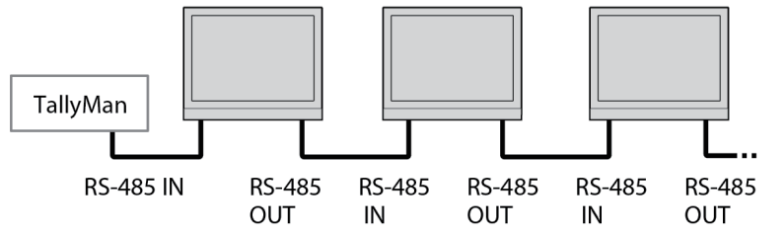


## 7. Assist— Setting for Vector scope and Histogram patterns.


Menu Item		Menu Description	Value
False Color		Turn false color display on or off	OFF, ON
Blue Only		Turn blue only on or off	OFF, ON
Focus Assist		Turn on or off focus assist and adjust the color of the focus assist	OFF, Blue, Red
Zebra		Turn zebra on or off	OFF, ON
Waveform	Waveform	Turn waveform on or off	OFF, ON
	WFM Type	Set the WFM Type	Y, Cb, Cr, R,G,B,RGB
	WFM Position	Set the WFM position	Bottom Left, Bottom Right, Top Left, Top Right
	WFM Blending	Set the blending of the background color of the waveform	OFF, High, Low
	WFM Color	Set the color of the waveform displayed on the waveform chart	White, Green, Color
	WFM Single Line*1	Switch on single line waveform	OFF, ON
	WFM Line Count	Set a line for the single line waveform	1-2160
Vector	Vector	Turn vector on or off	OFF, ON
	CIE	Turn CIE on or off	OFF, ON
	Vector Position	Adjust the position of the vector on the screen	Bottom Left, Bottom Right, Top Left, Top Right
	Vector Blending	Vector scope transparency selection	OFF, Low, High
	Vector Color	Set vector colors	White, Green, Color
Histogram	Histogram	Turn histogram on or off	OFF, ON
	Histogram Blending	Set the transparency of histogram background color	OFF, Low, High
Marker	Marker	Turn marker on or off	OFF, ON
	Marker Select	Set the scale of the market line	16:9, 15:9, 14:9, 13:9, 4:3, 2.35:1, 2:1, 1.85:1, 2.39:1, USER,1, USER2
	Horizontal*2	Set the X coordinate value of the marker	50%~99% (0~3840)
	Vertical	Set the Y coordinate value of the marker	50%~99% (0~2160)
	Safety area	Set safety area percentage	80%~99%
	Fit Marker	Set safety area to fit marker ratio or not	OFF, ON
	Center Marker	Switch on the center cross marker	OFF, ON
	Marker Color	Select a color for marker	White, Red, Green, Blue, Black, Gray
	Marker type	Marker outside color setting	Type 1, Type 2
Marker Outside	Set the display type of marker	OFF, Black, Gray	
Eye Pattern		Turn eye pattern on or off	OFF, ON

### \*1 WFM Single Line

Open waveform single-line mode, the monitor shows only one line of audio waveform. Rotate the Menu/Enter knob to select the number of lines of audio signal to display the waveform. (The selection range of the number of lines in a waveform depends on the current signal standard)

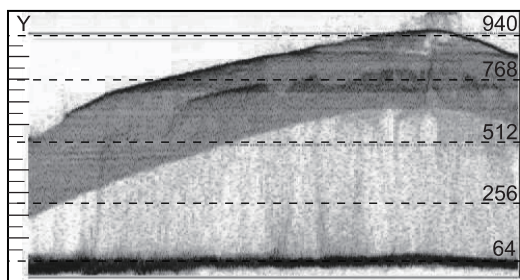

WFM Single Line: OFF

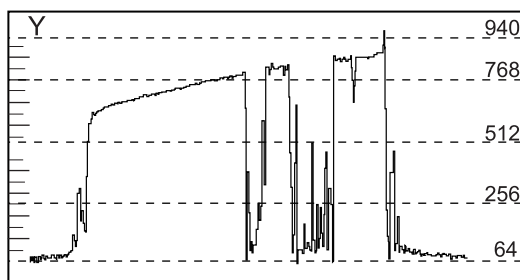

WFM Single Line:ON

### \*2.Horizontal/Vertical

When marker select is USER 1, Users can adjust the Horizontal and Vertical of the marking line according to their own needs, Coordinate value is adjustable from 50% to 99%; when marker select is USER2, the value of Horizontal is adjustable between 0~1920, the value of Vertical s is adjustable between 0~1080.

## 8. De-embed— Setting for video/audio analysis functions


Menu Item	Menu Description	Value
Audio Meter	Turn on or off audio bar	OFF, ON
Left Channel Sel	Select the left channel of SDI signal	Channel 1~16
Right Channel Sel	Select the right channel of SDI signal	Channel 1~16
Audio Channel Sel	Select the channel of HDMI signal	Channel 1~8
Audio Meter Position	Set the display position of the audio bar	Top Left, Top Right, Bottom Left, Bottom Right
Audio Meter Blending	Set the transparency of the audio table image background color	OFF, Low, High
Audio Meter Marker*1	Set the type of audio bar	OFF, ON
Surround Phase	Turn on/ off Surround	OFF, ON
Surround Position	Set the display position of the Surround	Top Left, Top Right, Bottom Left, Bottom Right
Volume	Adjust audio volume	0~100
Time code	Turn on/off Time code	OFF, ON
H/V Delay*2	Turn on/off H/V Delay	OFF, ON

### \*1.Audio Meter Marker


Turn off audio meter marker,display audio decibels、audio alarm signal and left/right channel options



Type 1

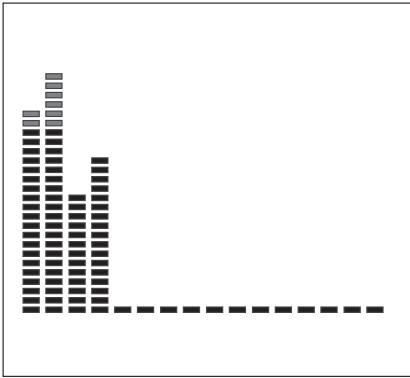

Type 2

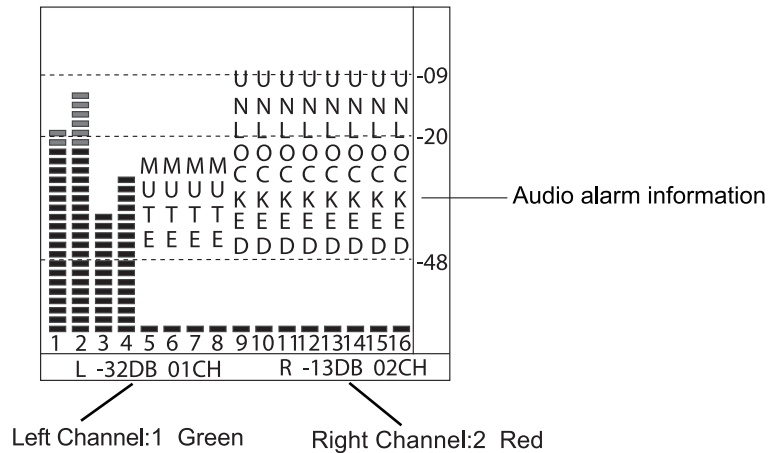

**\*2. H/V Delay**

H/V Delay is not displayed on HDMI channel.

**9. Auto Calibration\*1**

Menu Item	Menu Description	Value
Probe Select *2	Select a probe to use	X-rite I1 Pro OEM, Jeti Specbos 1211
Start Calibration*3	Select whether to start calibration	No/Yes
Measure*4	Test current color	No/Yes

**\*1.Auto Calibration**

The monitor has 3D LUT calibration software built-in, and supports the following color sensor probe to directly plug into front USB port. When start calibration, the monitor will generate standard colors and the color sensor will read the colors one by one and upload result to the monitor by USB connection. The monitor will comparing the generated colors and sensor read colors, to work out 3D LUT cube and calibrate itself automatically.

**\*2.Probe Select**

This monitor supports the following probes models:

BRAND	MODE
X-rite	I1 Pro OEM
JETI	Specbos 1211


**\*3.Start Calibration**

Steps:


1. Put the monitor into a dark room. Switch on the monitor.
2. Connect the calibration instrument (compatible with x-rite and JETI color measuring instruments) and monitor via USB. Before calibration, ensure that the monitor and the color calibration instrument are in good condition and the monitor aging time reaches 30 minutes.
3. Enter the “Probe Select” and select the currently used calibration probe.
4. Enter the “Start Calibration” and select “yes” to start calibration. The monitor will display the prompt message and the color position prompt box. Put the sensitive part of the device in the color position prompt box correctly. Note that when placing the calibration instrument; do not squeeze the monitor’s LCD screen.

Auto Calibration  
Please make sure the monitor is in dark room, and the sensor probe is put in the center marker and close to the screen.  
Select MENU to start!  
MENU:OK INFO:Quit

Auto Calibration  
Progress 23%  
Please wait...  
Select INFO to Cancel!  
INFO: Quit

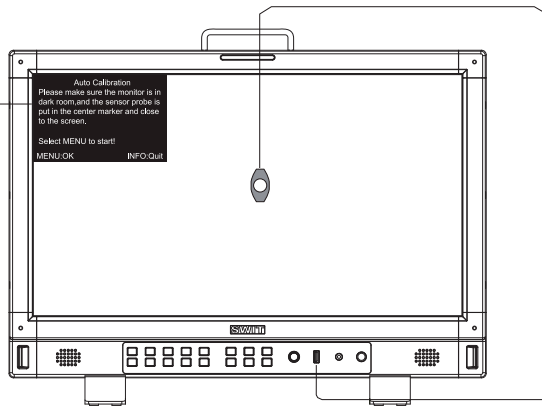

5. Select "yes" to begin auto calibration. The color calibration instrument will automatically measure the color of the screen and correct the color of the screen. During this process, it is necessary to observe the color calibration progress bar in the color correction prompt box.
6. Press "INFO" to terminate the color correction process at any time. When the prompt color calibration progress reaches 100%, the whole automatic color calibration is completed. After automatic color correction, press the "INFO" button to exit the menu and let the monitor enter the normal display mode.
7. After the automatic color correction, the display screen pops up "Before Calibration" and "After Calibration".

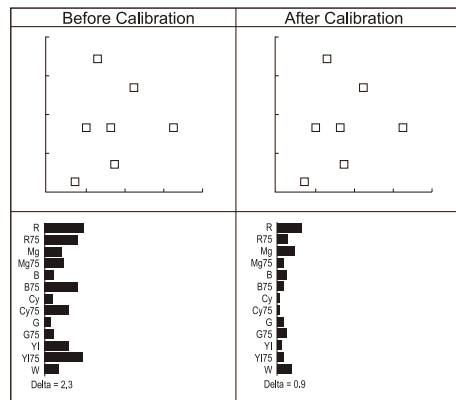


CIE and Delta E before calibration

CIE and Delta E after calibration

#### \*4. Measure

The monitor has been calibrated in factory. And may need to be re-calibrated after a period of time. Before re-calibrated, the measure function can check the current color to compare with the last time calibrated color, to decide if the monitor needs to be re-calibrated. Connect with the sensor probe and place the sensor probe onto the right position like calibration step. Enter "Auto Calibration" – "Measure". The monitor will generate several colors and finish measure

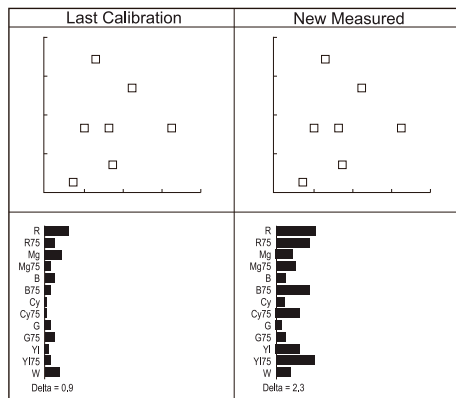

CIE and Delta E result of last calibration

CIE and Delta E result of new measured

## 10. System— User profile saving, firmware update.

Menu Item	Menu Description	Value
Key Lock *1	Set lock key	OFF, Full Lock
Recall Profile*2	Select make user mode current	Factory,USER1,USER2,USER3,USER4
Save Profile	Save the current state as a user setting	USER1,USER2,USER3,USER4
Payload ID	When turned on, ID information conforming to 352 standard is automatically adapted	OFF, ON
Low Latency Mode	Open or close low latency mode	OFF, ON
Green mode	Set the display mode of green mode	Black Backlight, Gray Backlight
Idle Duration	Set how long it will be in the no-signal state and turn on green mode	30 Sec, 1 Hour, 2 Hours, 4 Hours, OFF
IP*3	Set up the monitor IP address to achieve remote web control	192.168.001.200
Net Mask		255.255.255.000
Gateway		192.168.001.001
Port(1024~65535)		08080
OSD TIME	Set OSD display time	5~180
Key Brightness	Set the brightness of the key lamp	OFF, Low, High
Language	Select Chinese or English language to display	中文, English
System Reset	Reset all Settings in the menu system	No/Yes
Update *4	Set whether to upgrade firmware	No/Yes

### \*1.Key Lock



The “Menu/Enter” button can be operated when the button is locked. “Key Locked” will be displayed on the screen when you press the Locked button or knob.




## \*2 . Recall Profile/ Save Profile

User Settings provide 4 menu Settings, that is, users can save the current monitor menu Settings as one user Settings (USER1~USER4) according to usage habits. Then, when switching menu Settings, just select the corresponding "USER1~USER4" through the "Recall Profile" item to display the corresponding menu Settings.

Example :By adjusting the parameters of the color temperature of 2200K, open the necessary auxiliary functions (such as: histogram), set the function key to the desired menu (such as F1 is set to "Blue Only"), and so on, the monitor Menu Settings can be "USER Settings" save as "USER" 1, rotating the "Menu/Enter" choose to load the USER Settings "set to the current" USER 1 "mode, the monitor Menu item value will show" USER 1 "mode to save Menu.

## \*3 . IP control



Connect the monitor to the LAN through an ETHERNET interface, and the Monitor can be controlled by web page.

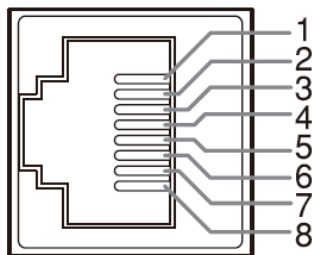

ETHERNET

Pin No	Pin Name
1	TX+
2	TX-
3	RX+
4	
5	
6	RX-
7	
8	

Enter Menu- System – IP/Net Mask/Gateway/Port to set the monitor address. Set the computer Ethernet IP addresses at the same LAN environment as the Monitor. Launch any of a web browser on the computer, and enter URL: Monitor IP+ Port (Example: 192.168.1.99:8080). The web server control page will be displayed.

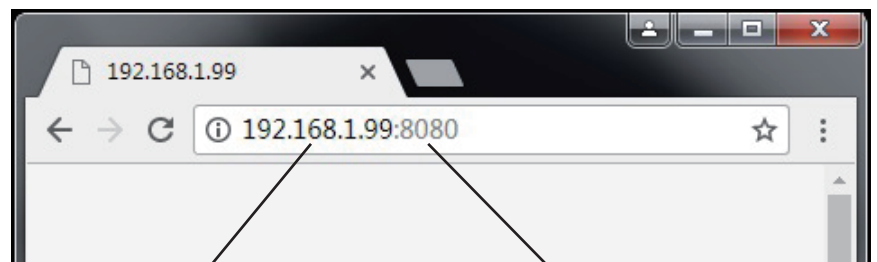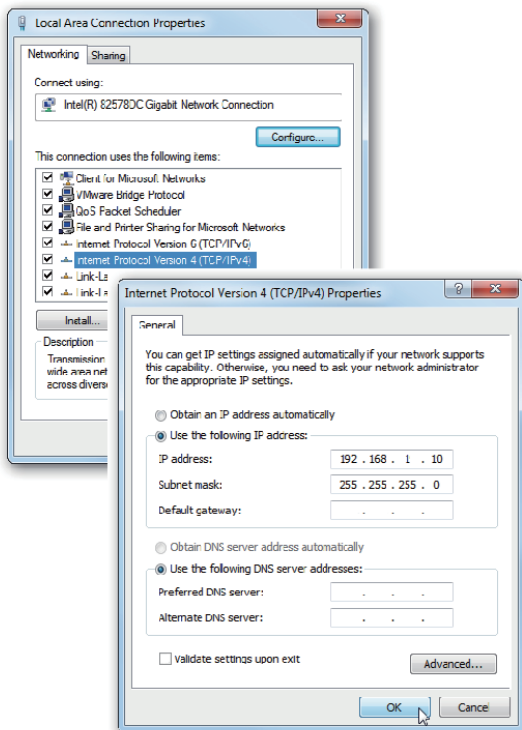

Monitor IP address

Monitor port address

Fig1: IP Address setting

Fig2: Web page

- Used crossed wired cable for computer-monitor directly connection.
- Use straight-through wired cable for Router connections.
- Please seek help from your webmaster for any network connections.

## Webserver page control interface

**SWIT.**
BM-U series

**Status**

Input Source: HDMI

Input Format: 3840\*2160P30

Loaded Profile: USER 1

Video Level Range: 64-940

YUV Color Matrix: BT.2020

Volume: 36

Chroma: 0

Bright: 0

Contrast: 0

Freeze Frame: OFF

Odd/Even Frame: OFF

Low Latency: OFF

Gamma: 2.2

Color Temp: D65

Log Mode: OFF

Monitor IP: 192.168.1.200

Net Mask: 255.255.255.0

Gateway: 192.168.1.1

Port: 8080

Refresh Status

**Settings** | Network | Update

**Input Source:** SDI1 SDI2 SDI3 SDI4 SQ 2-SI SFP **HDMI**

**Loaded Profile:** USER 1

**Function Key:** F1 F2 F3 F4 F5 F6

**Volume:** 0  100

**Chroma:** -100  100

**Brightness:** -100  100

**Contrast:** -100  100

**Frame:** Freeze Frame  Full  OFF

Odd/Even Frame  Odd  Even  OFF

Low Latency  ON  OFF

**Color:** VideoLevelRange  YUVColorMatrix

Gamma  Color Temp

**Settings** | Network | Update

**Monitor IP:**

**Net Mask:**

**Gateway:**

**Port:**   1024-85535

**Settings** | Network | Update

**Current Version:**

**Notes:**

1. Please make sure you have the update zip package on your PC.
2. Recommend to do Firmware updates only with AC power support.
3. Never shutdown the power during updating progress.

Please following these instructions:

Search a new update zip package on your PC:  未选择文件。


Press 'submit' to transfer it to the monitor:

Now ready to install, press 'Update':

#### \*4.Upgrade

System software can update by USB interface, and steps are as follows:

- 1.Download the latest software package into the U-disk root direction.
- 2.Open the monitor and plug U-disk into USB into port.
- 3.Follow the step “Menu-System“, the monitor will update automatically.
- 4.When update finishes, press “Power” button, close and reboot the monitor.

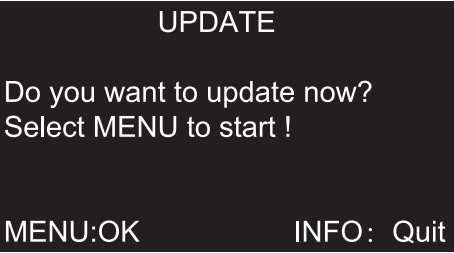	<p>※ Remark</p> <ol style="list-style-type: none"><li>1. Only copy one model and software version into the U-disk root direction.</li><li>2. Never shutdown the power during the update progress.</li></ol>
---	---



### 11.Multiview Setting\*1

Menu Item	Menu Description	Value
Multiview Type	Select multiview type	Quad View、PBP、PIP
PIC 1	Select PIC 1 video	SDI 1、SDI 2、SDI 3、SDI 4、HDMI
PIC 2	Select PIC 2 video	SDI 1、SDI 2、SDI 3、SDI 4、HDMI
PIP Window Position	Set the display position of the PIP PIC 2 on the screen	Bottom Left, Bottom Right, Top Left, Top Right, Center
Border	Turn Border ON or OFF	OFF, ON

\*1 Multiview setting menu can be set only when selecting Multiview,otherwise the setting will be grey and can no be adjust; When select multiview, the limit range,color gamut,gamma,UMD and Payload ID can be adjust separately; Part of menu function will be banned when select multiview.

# Size

Monitor (unit:mm)

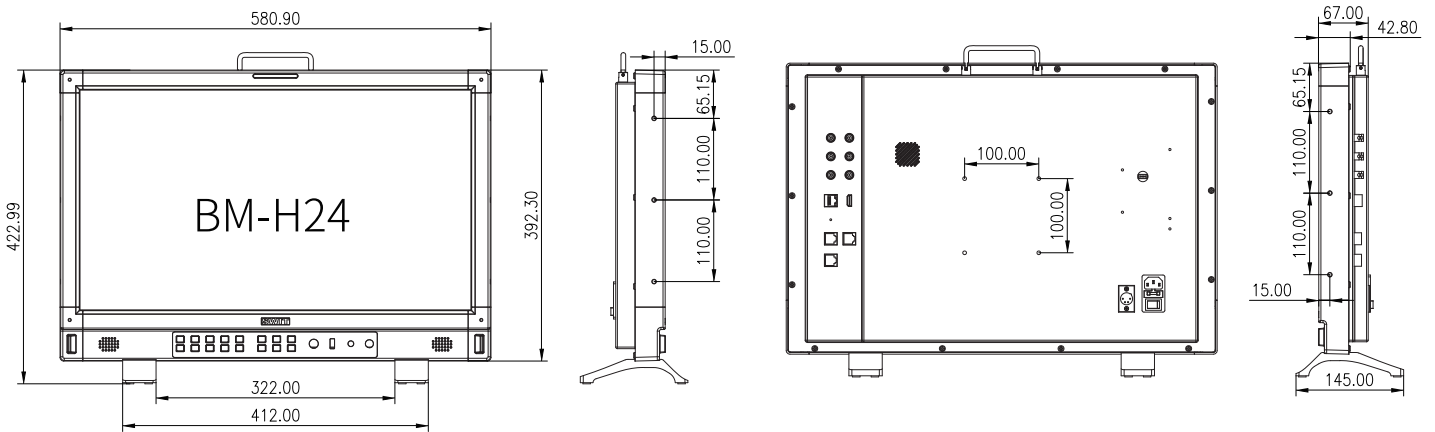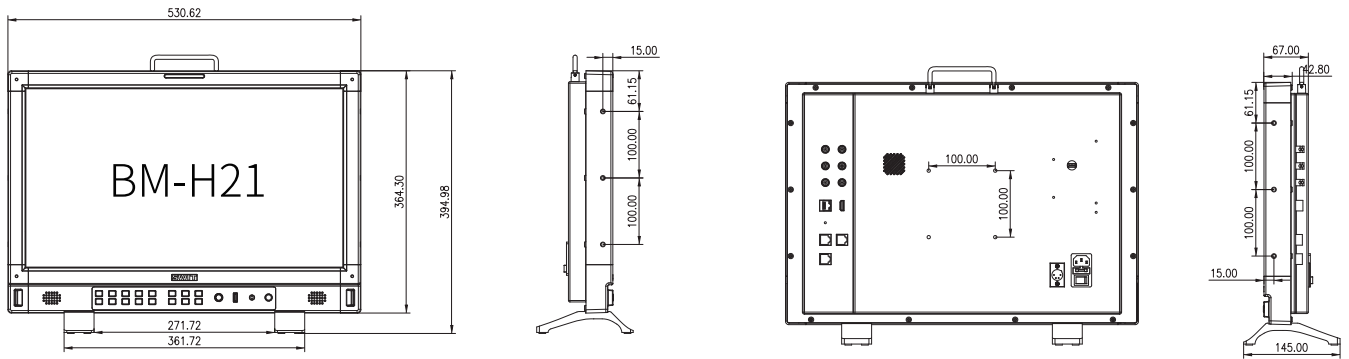

## Specification

LCD Performance		
Model	BM-H215	BM-H245
Size	21.5 inch	23.8 inch
Display area	476.064×267.786mm	527.04×296.46mm
Resolution	1920×1080	1920×1080
Display Color	16.7M	16.78M
Display ratio	16:9	16:9
Brightness	250cd/m <sup>2</sup>	250cd/m <sup>2</sup>
Contract	1000:1	1000:1
Viewing Angle	H/V: 178°/178°	H/V: 178°/178°
Input /Output		
Input	BNC×4	12G/6G/3G/HD/SD-SDI×1, 6G/3G/HD/SD-SDI×3
	HDMI×1	HDMI input
	RS-485×2	GPI×1、UMD×1
	USB×1	
	ETHERNRT	
Output	BNC×2	6G/3G/HD/SD-SDI×2
	RS-485×1	UMD×1
Other specification		
Working voltage	AC:100V~240V DC/Battery:12V~17V	
Power consumption	60W	
Working temperature	0°C~+50°C	
Working humidity	10%~90%	
Storage temperature	- 15°C~ + 60°C	
Storage humidity	10%~90%	
Dimensions (mm)	530.62×364.30×67.00mm	580.90×392.30×67.00mm
Net weight (w/o stand)	6.6KG	7.8KG



## Supported Format: Signals below can display on the monitor

No.	Format	Input terminal				Signal format shown in the Status Display as	
		SDI1	SDI 2/3/4	Quadlink SDI	HDMI	SDI	HDMI
1	720×480/60I	√	√	—	—	720*480I60	720*480I60
2	720×480/60P	—	—	—	√	720*480P60	720*480P60
3	720×576/50I	√	√	—	—	720*576I50	720*576I50
4	720×576/50P	—	—	—	√	720*576P50	720*576I50
5	1280×720/23.98P	√	√	—	√	1280*720P23.98	1280*720P24
6	1280×720/24P	√	√	—	√	1280*720P24	1280*720P24
7	1280×720/25P	√	√	—	√	1280*720P25	1280*720P25
8	1280×720/29.97P	√	√	—	√	1280*720P29.97	1280*720P30
9	1280×720/30P	√	√	—	√	1280*720P30	1280*720P30
10	1280×720/50P	√	√	—	√	1280*720P50	1280*720P50
11	1280×720/59.94P	√	√	—	√	1280*720P59.94	1280*720P60
12	1280×720/60P	√	√	—	√	1280*720P60	1280*720P60
13	1920×1080/50I	√	√	—	√	1920*1080I50	1920*1080I50
14	1920×1080/59.94I	√	√	—	√	1920*1080I59.94	1920*1080I60
15	1920×1080/60I	√	√	—	√	1920*1080I60	1920*1080I60
16	1920×1080/23.98PSF	√	√	—	√	1920*1080PSF23.98	1920*1080PSF24
17	1920×1080/24PSF	√	√	—	√	1920*1080PSF24	1920*1080PSF24
18	1920×1080/23.98P	√	√	—	√	1920*1080P23.98	1920*1080P24
19	1920×1080/24P	√	√	—	√	1920*1080P24	1920*1080P24
20	1920×1080/25P	√	√	—	√	1920*1080P25	1920*1080P25
21	1920×1080/29.97P	√	√	—	√	1920*1080P29.97	1920*1080P30
22	1920×1080/30P	√	√	—	√	1920*1080P30	1920*1080P30
23	1920×1080/48P	√	√	—	√	1920*1080P48	1920*1080P48
24	1920×1080/50P	√	√	√	√	1920*1080P50	1920*1080P50
25	1920×1080/59.94P	√	√	—	√	1920*1080P59.94	1920*1080P60
26	1920×1080/60P	√	√	√	√	1920*1080P60	1920*1080P60
27	2048×1080/23.98PSF	√	—	—	√	2048*1080PSF23.98	2048*1080PSF24
28	2048×1080/24PSF	√	—	—	√	2048*1080PSF24	2048*1080PSF24
29	2048×1080/25PSF	√	—	—	√	2048*1080PSF25	2048*1080PSF25
30	2048×1080/29.97PSF	√	—	—	√	2048*1080PSF29.97	2048*1080PSF30
31	2048×1080/30PSF	√	—	—	√	2048*1080PSF30	2048*1080PSF30
32	2048×1080/23.98P	√	—	—	√	2048*1080P23.98	2048*1080P24
33	2048×1080/24P	√	—	—	√	2048*1080P24	2048*1080P24
34	2048×1080/25P	√	—	—	√	2048*1080P25	2048*1080P25
35	2048×1080/29.97P	√	—	—	√	2048*1080P29.97	2048*1080P30
36	2048×1080/30P	√	—	—	√	2048*1080P30	2048*1080P30
37	2048×1080/47.94P	√	—	—	√	2048*1080P47.94	2048*1080P50
38	2048×1080/48P	√	—	—	√	2048*1080P48	2048*1080P48
39	2048×1080/50P	√	—	—	√	2048*1080P50	2048*1080P50

No.	Format	Input terminal				Signal format shown in the Status Display as	
		SDI1	SDI2/3/4	Quadlink SDI	HDMI	SDI	HDMI
40	2048×1080/59.94P	√	—	—	√	2048*1080P59.94	2048*1080P60
41	2048×1080/60P	√	—	—	√	2048*1080P60	2048*1080P60
42	3840×2160/23.98P	√	—	—	√	3840*2160P23.98	3840*2160P24
43	3840×2160/24P	√	—	—	√	3840*2160P24	3840*2160P24
44	3840×2160/25P	√	—	—	√	3840*2160p25	3840*2160p25
45	3840×2160/29.97P	√	—	—	√	3840*2160P29.97	3840*2160P30
46	3840×2160/30P	√	—	—	√	3840*2160P30	3840*2160P30
47	3840×2160/47.94P	√	—	—	√	3840*2160P47.94	3840*2160P50
48	3840×2160/48P	√	—	—	√	3840*2160P48	3840*2160P48
49	3840×2160/50P	√	—	—	√	3840*2160P50	3840*2160P50
50	3840×2160/59.94P	√	—	—	√	3840*2160P59.94	3840*2160P60
51	3840×2160/60P	√	—	—	√	3840*2160P60	3840*2160P60
52	4096×2160/23.98P	√	—	—	√	4096*2160P23.98	4096*2160P24
53	4096×2160/24P	√	—	—	√	4096*2160P24	4096*2160P24
54	4096×2160/25P	√	—	—	√	4096*2160P25	4096*2160P25
55	4096×2160/29.97P	√	—	—	√	4096*2160P29.97	4096*2160P30
56	4096×2160/30P	√	—	—	√	4096*2160P30	4096*2160P30
57	4096×2160/47.94P	√	—	—	√	4096*2160P47.94	4096*2160P48
58	4096×2160/48P	√	—	—	√	4096*2160P48	4096*2160P48
59	4096×2160/50P	√	—	—	√	4096*2160P50	4096*2160P50
60	4096×2160/59.94P	√	—	—	√	4096*2160P59.94	4096*2160P60
61	4096×2160/60P	√	—	—	√	4096*2160P60	4096*2160P60

3G supports level A/levelB; Support RGB444

√: The format is supported

—: The format is not supported

# Trouble-shooting

symptom	Possible causes	Solution
No display	The power is not turned on	Please check if the power is connected, and then press “POWER” button to turn on the monitor
	Unstable power voltage	Reconnect to power supply
	BNC or HDMI cable loose contact or not correctly connected	Check and correctly connect the BNC or HDMI cable
	The attached battery is no power	Change battery
	Using DIY power supply but the polarity is reversed	Refer to the provided power supply, reconnect the power.
Image or color abnormal	Bad contact of BNC or HDMI cable	Change the Video cable
	Video signal has Interference	Remove the interference source(s)
	Improper adjustment of the color parameters	Adjust the “Recall profile” to “Default” under “System” submenu
	Distortion of the image	Reset the Aspect ratio
	Set to Blue only	Turn off the “pure color “ setting
	Turn on the “Focus Assist” function	Turn off the “Focus Assist” function
	Turn on the “False Color” function	Turn off the “False Color” function
No audio output	Set mute state	Cancel mute state or spin ” MENU/ENTER ” to adjust volume
	Bad contact of signal cable	Change signal cable
	Wrong connection or bad contact of Audio cable	Connect to the correct input socket



---

### **SWIT Electronics Co., Ltd.**

Add: 10 Hengtong Road, Xin'gang, Nanjing Economic and Technological Development Zone, Nanjing 210038, P.R.China  
Tel: +86-25-85805753      Email: [contact@swit.cc](mailto:contact@swit.cc)

---

### **SWIT Electronics Europe GmbH**

Add: Hochstr. 17, 47228 Duisburg, Germany  
Tel: +49(0)20659799339      Email: [info@swit-europe.com](mailto:info@swit-europe.com)

---

### **SWIT Electronics America, Inc**

Add: 3350 Scott Boulevard 61-02, Santa Clara, CA 95054, USA  
Tel: (408)260-8258, 1-866-986-SWIT(7948)      Email: [info@swit.us](mailto:info@swit.us)

---